

## Unpacking Instructions for Bulb Thermal Activator – BTA V3 (Applied on Air Freight Packaging only)

This technical documentation provides information for the proper unpacking of the activator of the BTA V3.

Please follow strictly these unpacking instructions for the boxed BTA V3.

The parts which will comprise the BTA V3 Packing are shown in the below image.



Image 1

# FirePro.

The BTA activators are installed on the end caps, which in turn are screwed on to the aluminium tube prior to delivery, as shown in Figure 1 below.

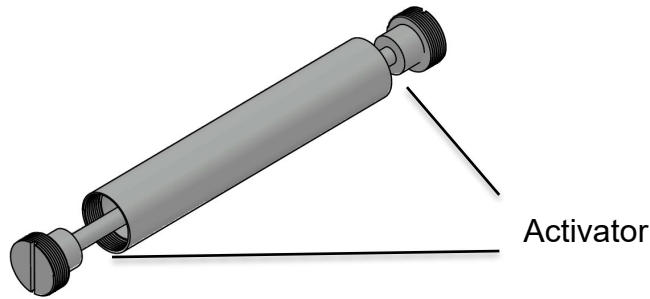


Figure 1

The BTA activators are fully enclosed and protected inside aluminium housing during delivery. This packing can accommodate up to two activators.

The activators for the cylindrical generators, have the activator adaptor installed on the main body of the activator.

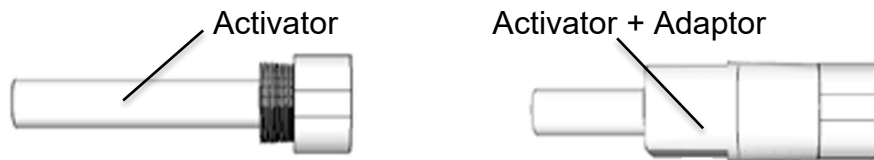


Figure 2

Aluminium Housing: Using a flat head screwdriver or a coin, please proceed to rotate anti-clockwise the 2 caps, in order to unscrew them from the main tube and reveal the activators.

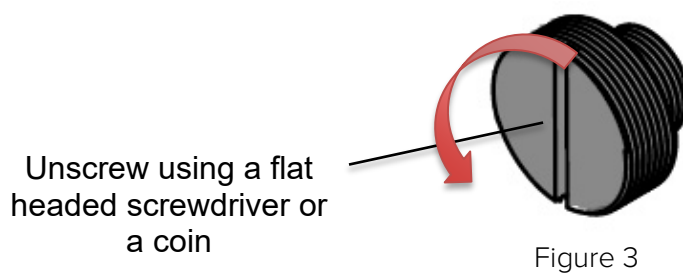


Figure 3

Once the end caps are unscrewed, proceed to unscrew the activators from the end caps by hand, in an anti-clockwise direction.

Once the activators are unpacked, proceed with the installation of the activators on to the upper mechanical parts (packed separately).

